




# Link Office Chair

User Manual


iiglo®

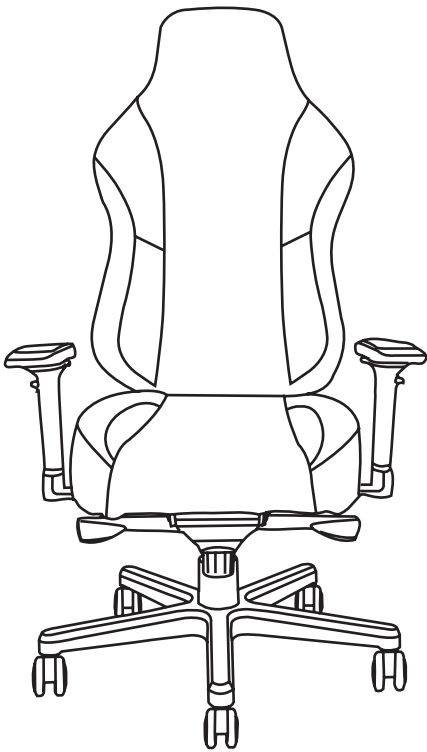


Attention: Please make sure the angle of the adjuster on the seat base is set at 90 degrees (as shown in figure 2).

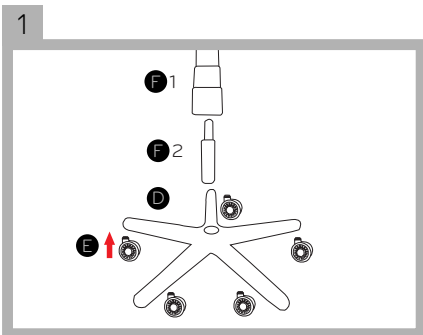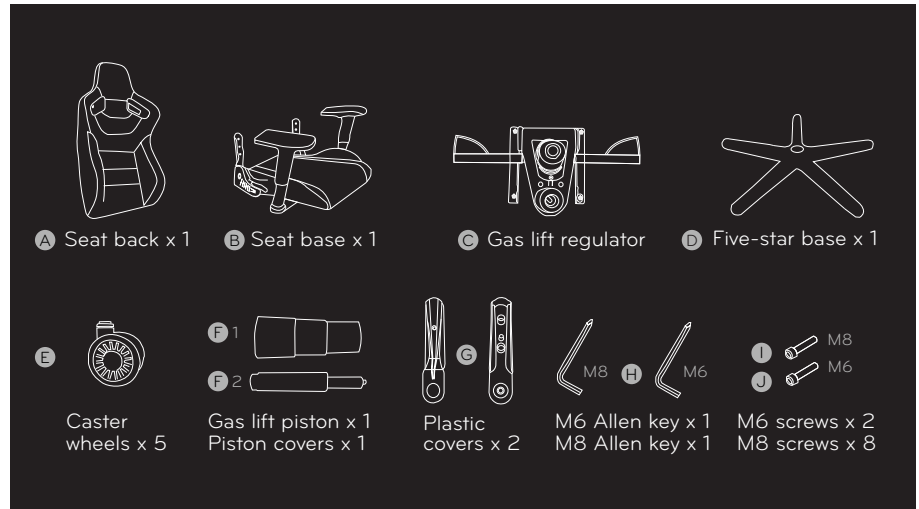


1 Install the wheels, gas lift piston and the piston cover onto the star base. These parts are easy to install. No screws, just click in place.

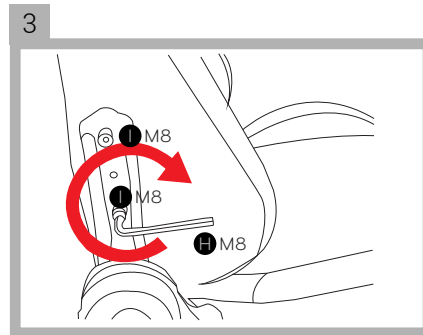


3 Use an M8 Allen key to fix the seat back/top onto the seat base metal hinges, using the same M8 screws.

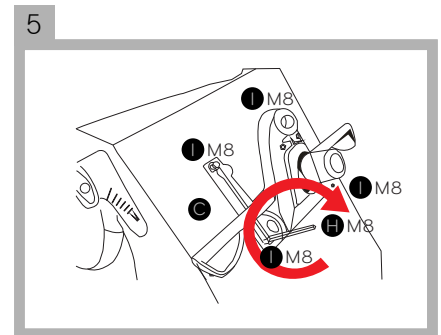


5 Mount the gas lift regulator underneath the seat using four M8 screws. It is important that the notch for the gas lift is mounted on the rear-end of the seat.

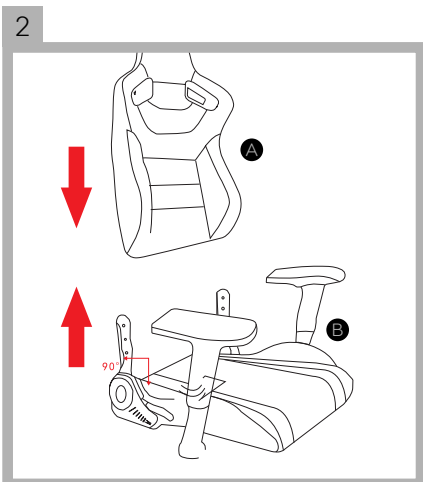

2 Remove the M8 screws from the seat back/top. Place the seat back/top onto the seat base between the metal hinges.

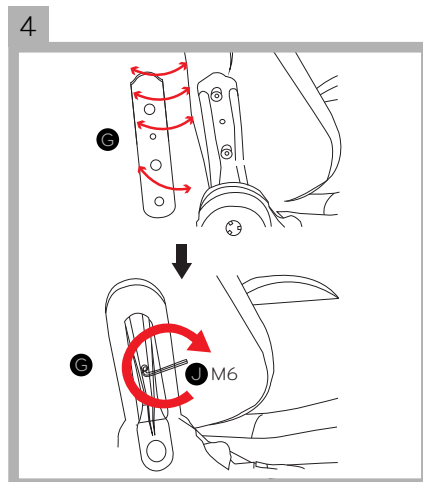


4 Mount the plastic covers onto the metal hinges using an M6 screw. The shape of the plastic cover should fit perfectly. Start with the left side.

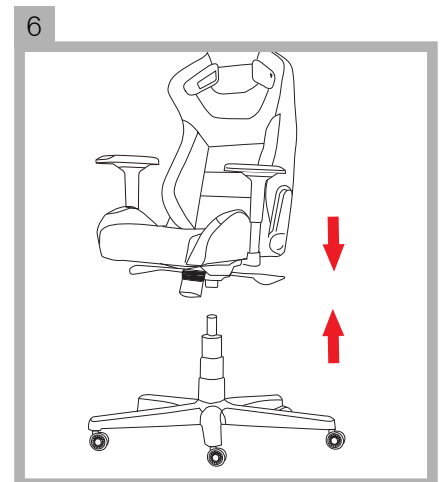


6 Insert the gas lift piston into the notch of the gas lift regulator underneath the seat. No screws needed, balance the seat and it will click in place. Gently apply pressure.

## Seat back adjustment

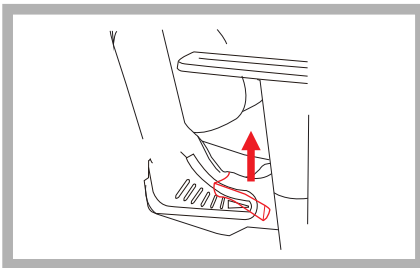

Lift the handle on the right side and lean gently forward or backward to adjust the position of the seat back/top. Push down handle to lock the position.


## Seat height adjustment

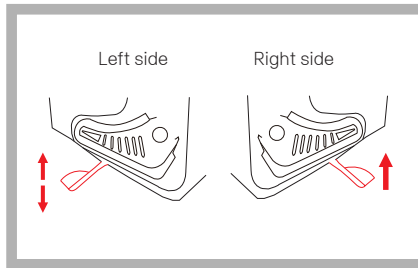

Seat height: lift the handle on the right side underneath the seat. Sit on the chair to lower the seat or stand up to adjust the seat higher. Let go of the handle to lock the position.

Seat tilt: Lean backwards or forwards to find the best tilt and sitting position. Lock the position by pushing down the handle on the left side underneath the seat. Release the tilted position by lifting the handle.

## Armrest adjustment

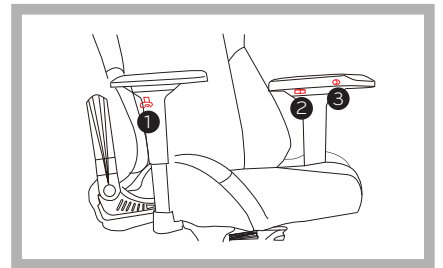

Lift the armrest: Press button (1) and pull the armrest upwards.

Lower the armrest: Press button (1) and push the armrest downwards.

Side positioning the armrest: Press button (2) and adjust armrest to the left or right.


Forwards positioning the armrest: Press button (3) and pull the armrest frontwards or backwards.

## Attentions:

1. Please do not use the chair for other purposes.  
There may be risk of overturn if standing on the chair.
2. Put a soft cushion under the chair when installing, to prevent damages to the floor or the chair.
3. Please use the chair on a flat surface.
4. The product is intended for single person use only.
5. It might be dangerous to move the chair with goods on it, please be careful.
6. Keep away from fire or hot items such as ovens.
7. Keep away from direct sunlight.
8. Do not use the chair in fire or damp environments.
9. Use a soft dry cloth to clean the chair.
10. If there are stains, please use a mild detergent, hot water and a soft cloth to wipe the chair. After that use a dry cloth.
11. Dismantling of gas spring is prohibited.
12. Other cautions are also described in the instructions, please read carefully.



Caution! Please do not lift feet when lying flat on the chair.

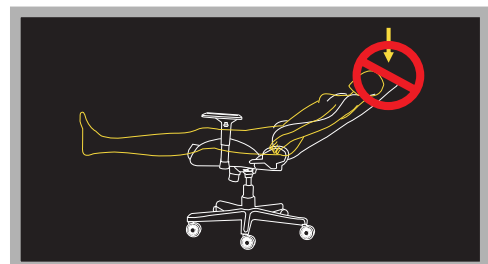

Please do not push the head part when lying flat on the chair.